

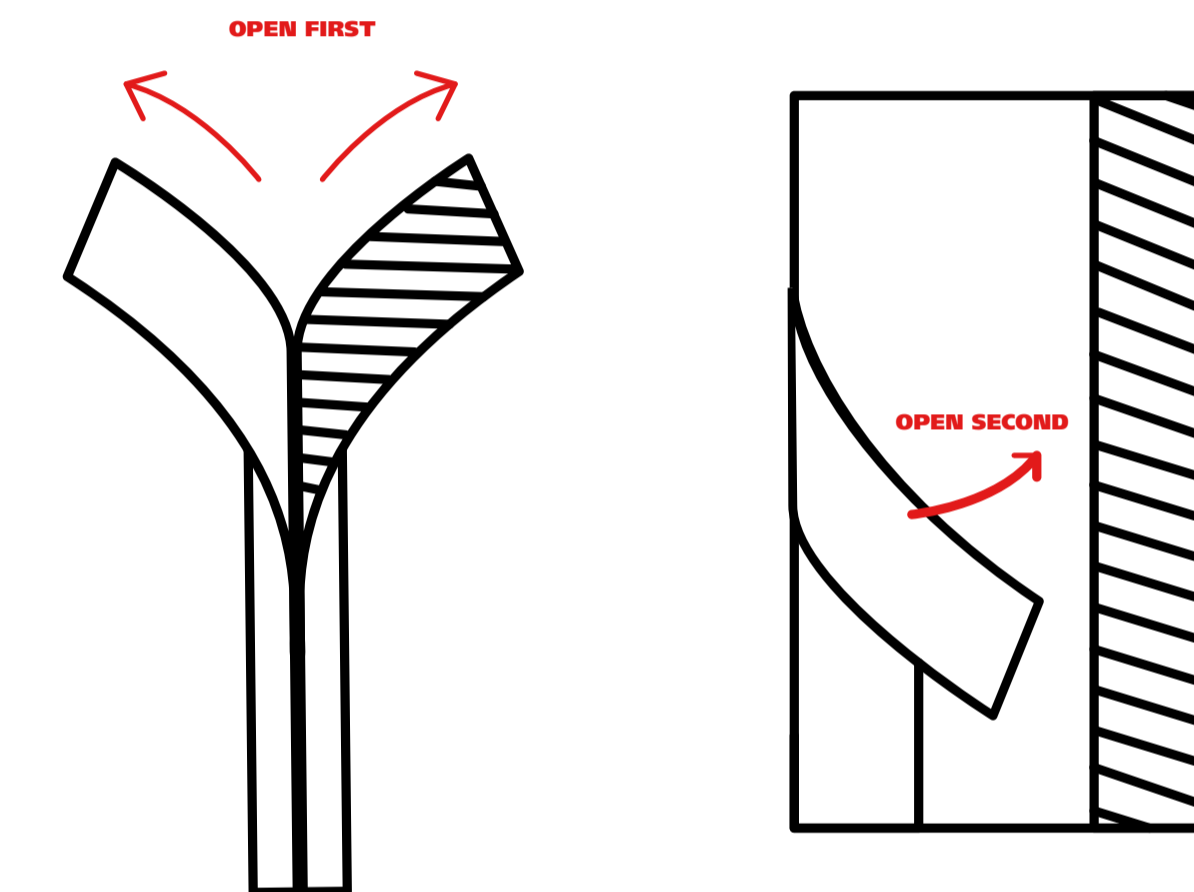


# BATTERY REPLACEMENT INSTRUCTIONS

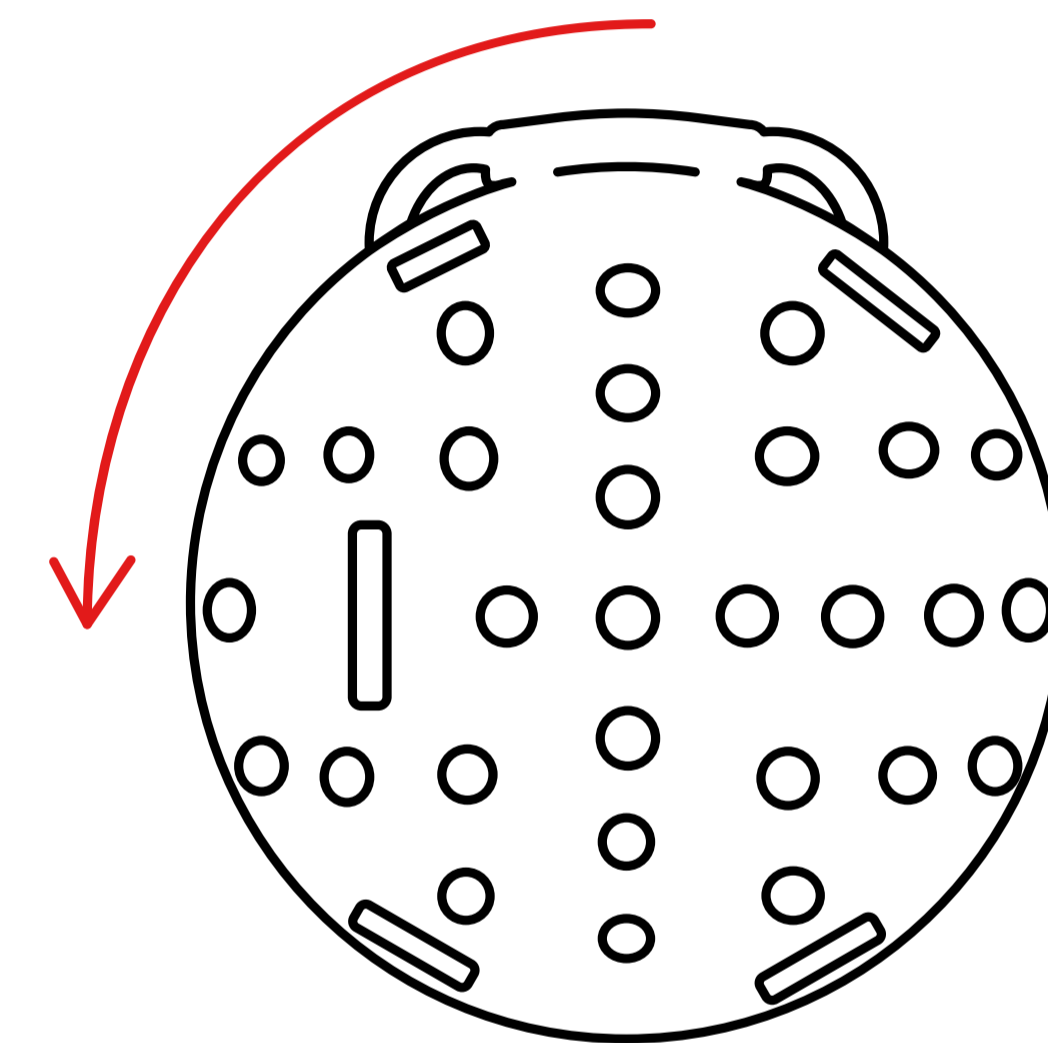


Open fabric closure on back of toy.

Flip toy over and open first fabric closure. Open second fabric closure, located on the left side. Remove motion ball from toy skin.

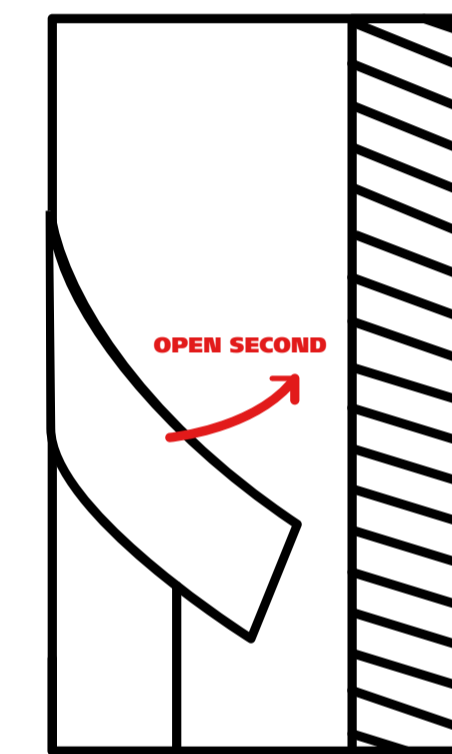


Twist two halves of ball to open.

Hold the bottom half of ball in left hand while gripping top half with right hand. Gently twist right hand counter clockwise, letting left hand twist clockwise. Gently separate two halves of ball.

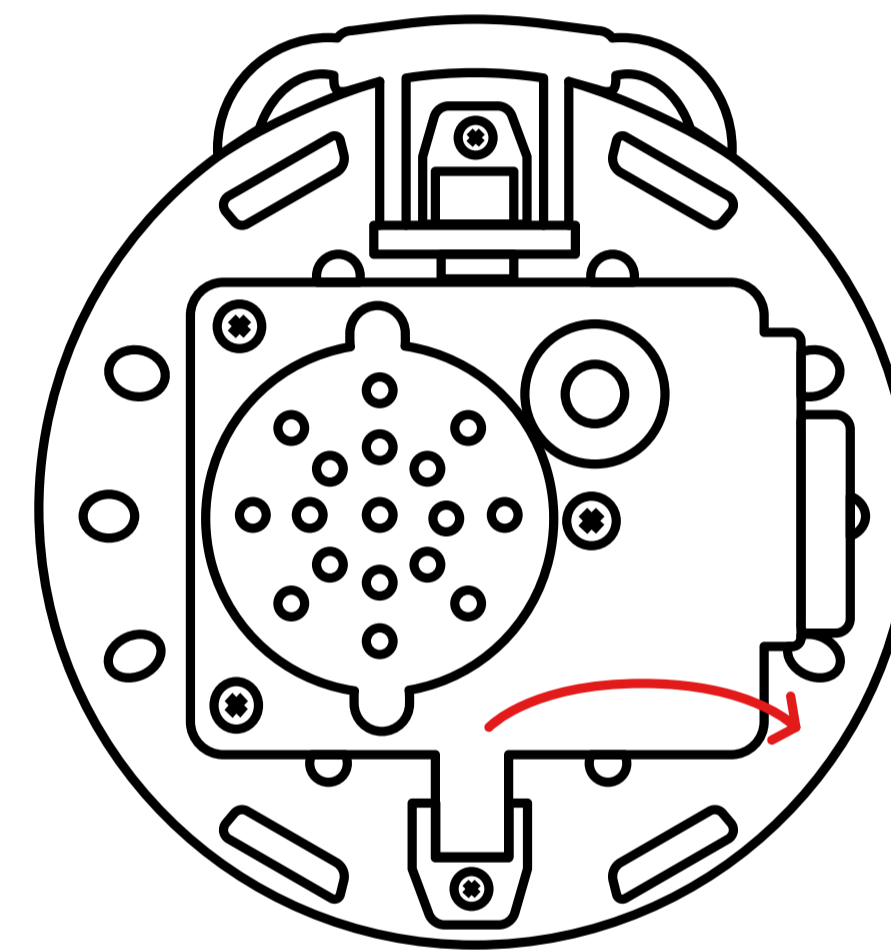


Rotate motor to find battery door.

You may have to gently rotate the motor to reveal battery door. The speaker should be facing down.

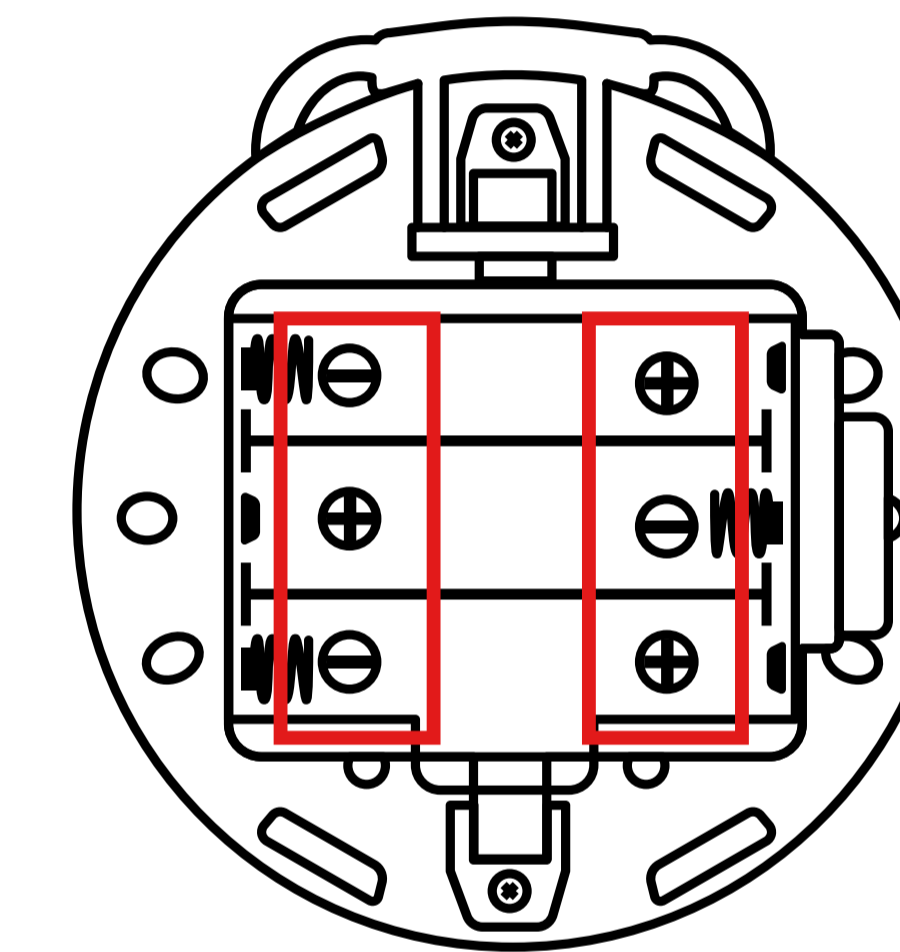



Press tab to lift and remove. Replace with 3 new AAA batteries.

Gently squeeze tab inwards, and separate battery door from compartment. Remove used batteries and replace with new AAA batteries, ensuring the positive and negative poles match.

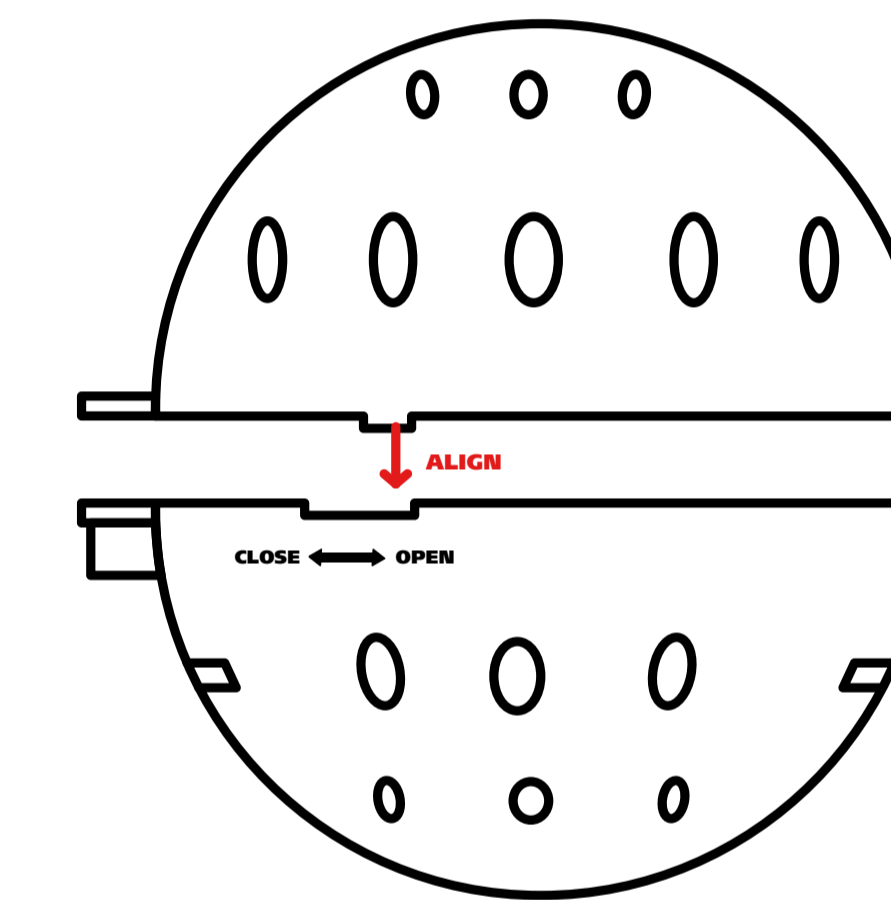

Align two halves and then twist until you hear a click.

Align the tab on the top half of the ball to the open side of the tab on the bottom half of the ball. With the bottom half of the ball in your left hand and the top of the ball in your right, twist clockwise until you feel a click.

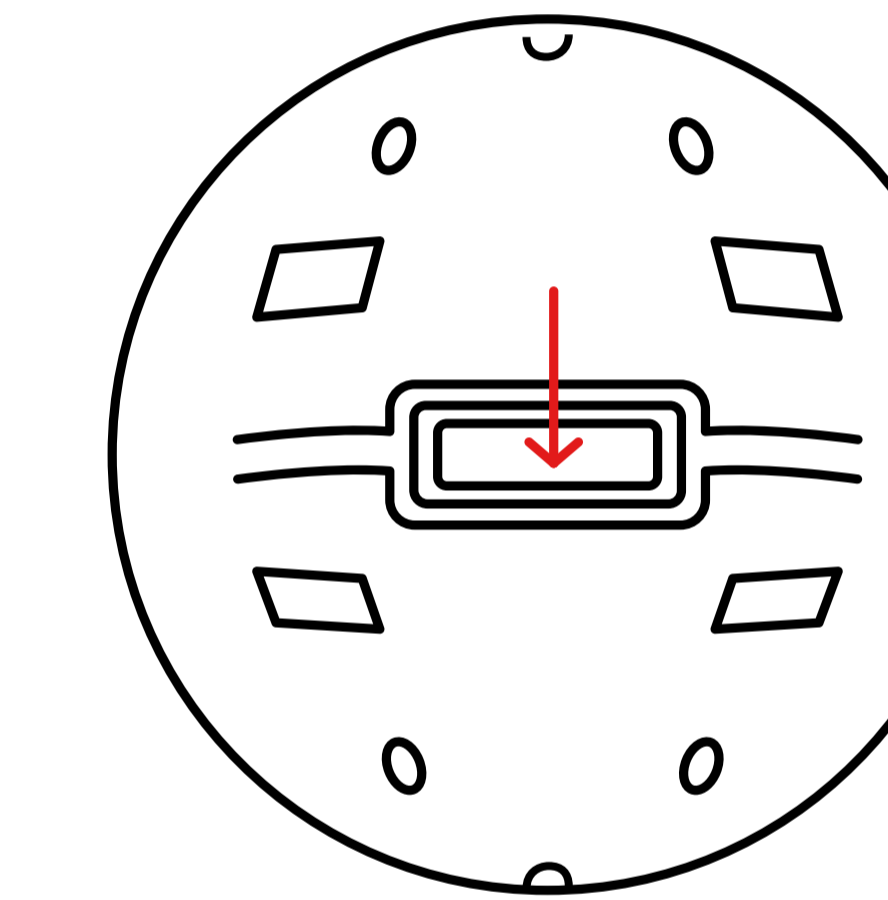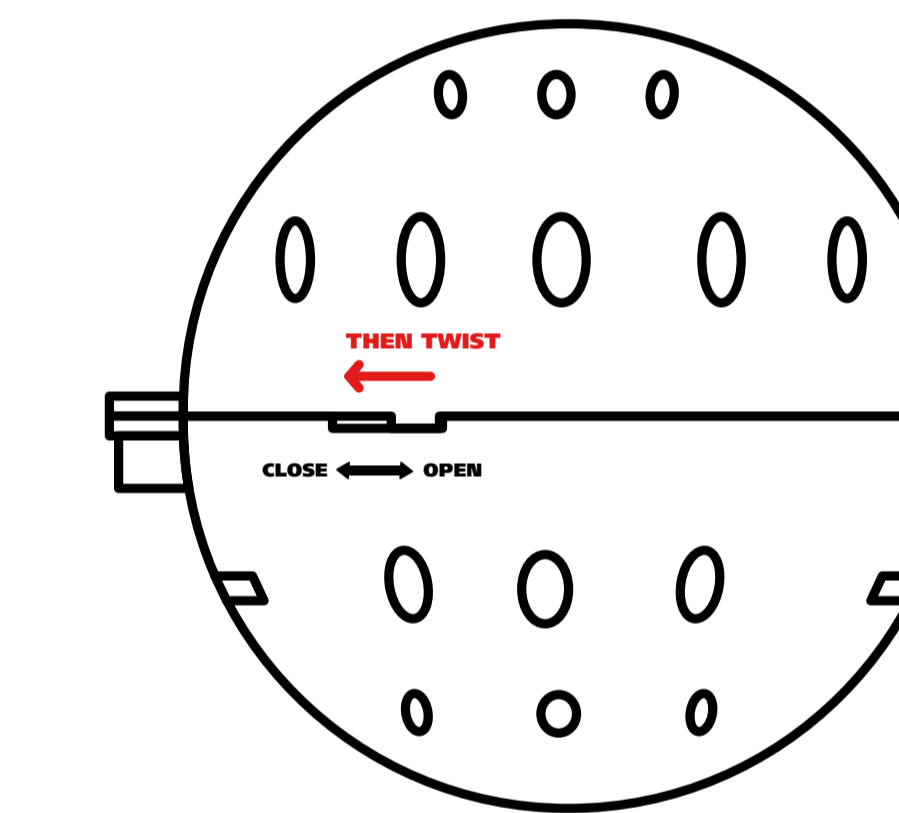

Note location of on/off switch. Replace internal ball in fabric skin and press hold button down once.

Switch is located on the top of the ball. Press and hold switch while shaking ball until activated. Toy will come to a rest in absence of motion, but will activate again once dog engages in play. Press button once more to turn toy off. Do not store toy with batteries in battery compartment, as batteries may corrode over time.